


# 50mm DIA SWIVEL WHEEL & EXPANDER

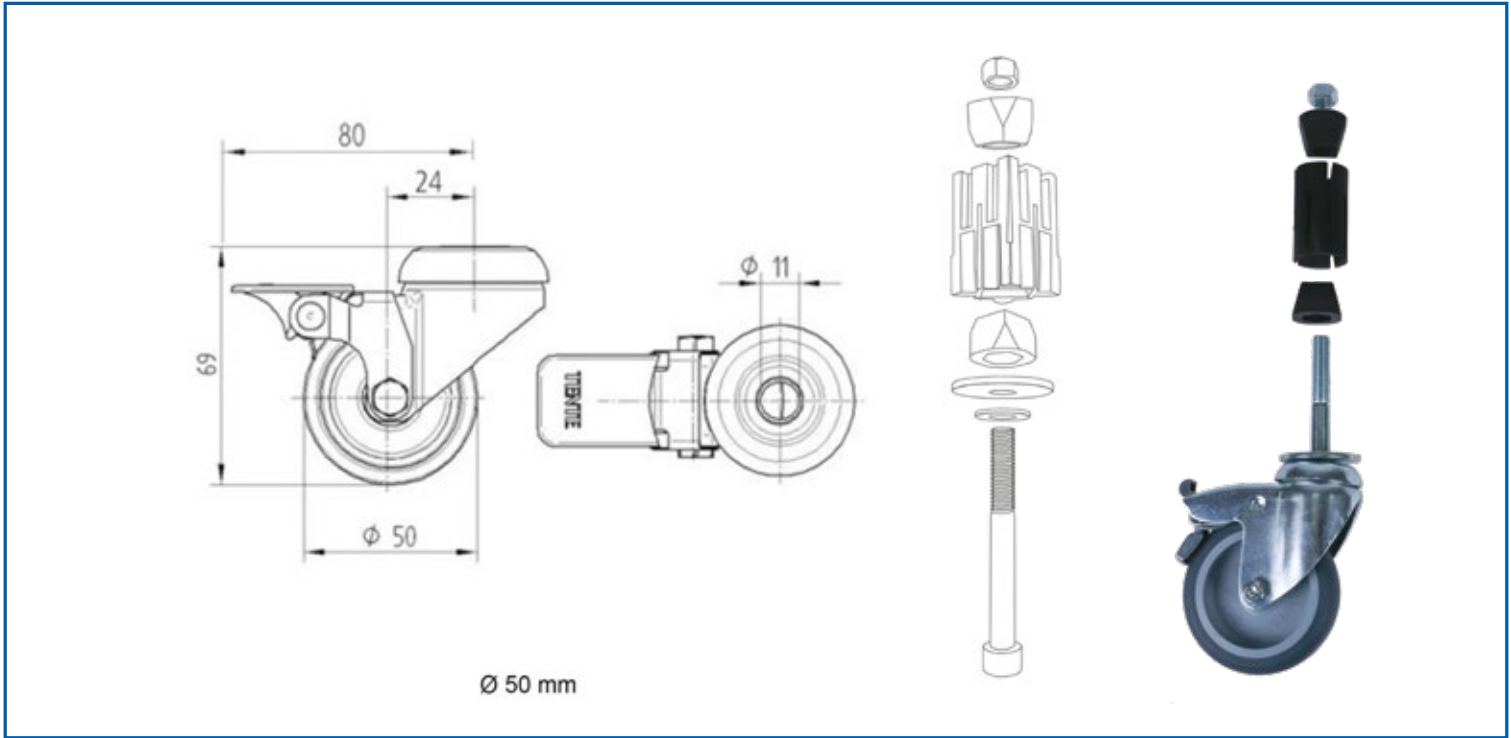


## Code: 16ZWB50C

- Suit 42.4mm hollow tube
- 50mm diameter wheels
- Expander included
- With brake
- Black finish



The following steps will ensure the wheel and expander are secure:

1. Disassemble the expander parts
2. You may need to remove the castor wheel depending on your Allen key
3. Fit bolt with spring washer through hole in bottom of support plate
4. Place the thread through the parts as shown
5. Reassemble expander but do not overtighten
6. Insert expander into hollow tube
7. Tighten using a 5/16" A/F Allen key (16232D) until secure
8. Reassemble the castor wheel if you needed to remove for step 2

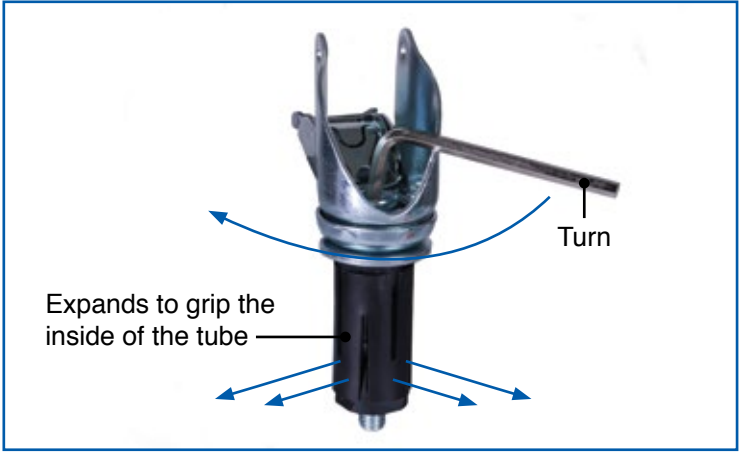

| Dynamic Load Capacity | Static Load Capacity |
|-----------------------|----------------------|
| 40kg                  | 80kg                 |

Whilst every effort has been made to ensure the accuracy of the information supplied. F.H. Brundle cannot be held responsible for any errors or omissions. This product must only be employed for its original intended use. Any other use is wrong and potentially dangerous. Installation must be carried out in full compliance with current regulations. F.H. Brundle cannot be held liable for any damages resulting from wrongful, erroneous or negligent use.